



**A BETTER
AIR GAP**
J. H. VERNECO, INCORPORATED


VA-4 AIR GAP

INSTRUCTIONS FOR VA-4 AIR GAP INSTALLATION

The VA-4 Air Gap gets glued on the inside of a 2" PVC pipe which is inside a washer box set so that the washer drain and softener drain holes do not interfere with each other when the washer hose is reinstalled.

After installing VA-4, washer drain hole can be reinstalled onto larger hole on top of the VA-4. Then you can glue choice of fittings into smaller hole on top of VA-4 and aim in a direction that will clear the washer box when attaching the softener drain.

It is recommended to use a hose clamp on softener drain lines.

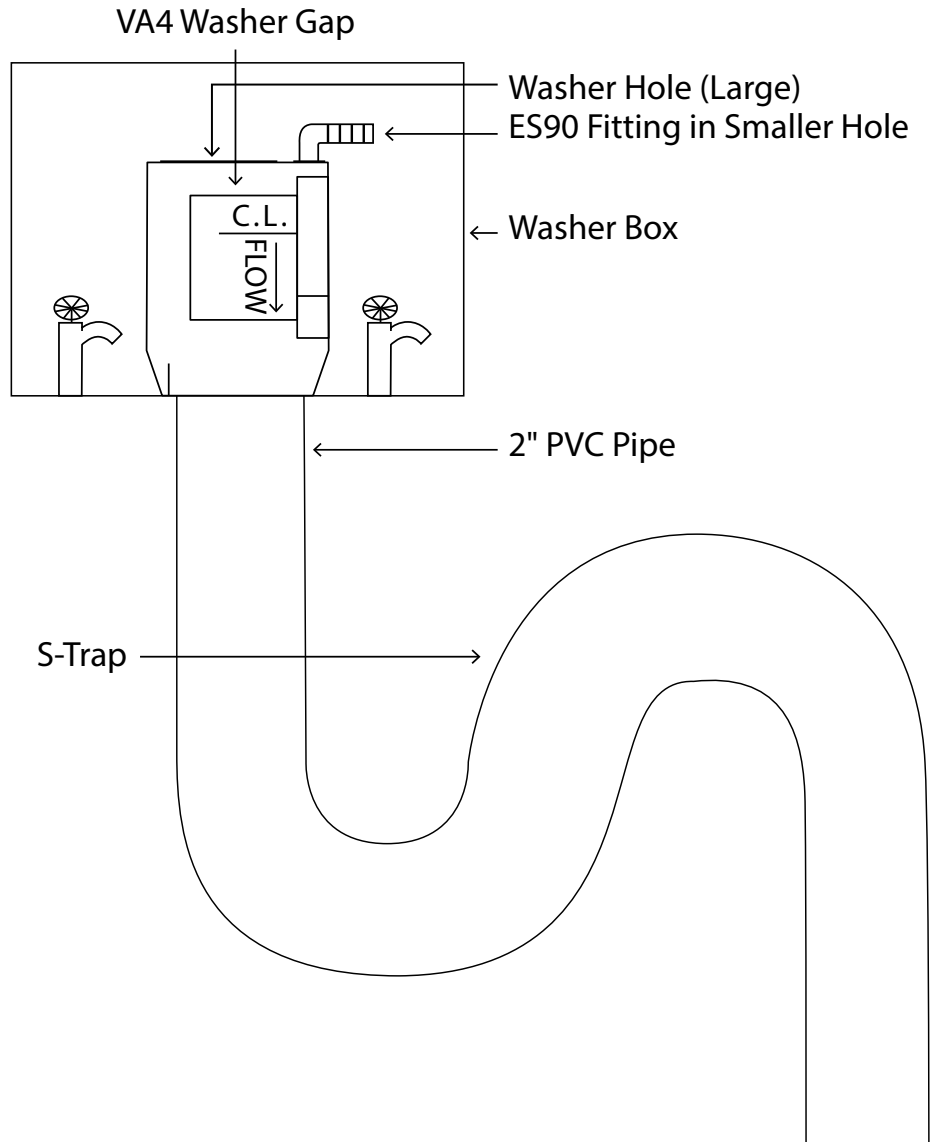

Warning: DO NOT get glue on bottom of fitting as this will cause splash (see image).

