



**A BETTER
AIR GAP**
J. H. VERNECO, INCORPORATED

VA-2 AIR GAP

INSTRUCTIONS FOR VA-2 AIR GAP INSTALLATION


Follow all state and local plumbing codes

Air Gap VA-2 gets glued onto a 1 1/2" PVC stand pipe. Follow all state and local plumbing codes. Stand pipes should be between 6 and 18 inches in height after a trap. *Note: All stand pipes need trapped to prevent sewer gas from escaping back through the air gap.*

Fitting ES90, ES180, ESPVC, ESCPVC can then be glued onto top of air gap.

It is recommended to use a hose clamp when attaching drain line from softener to fittings ES90 and ES180. When using ESPVC and ESCPVC and escape follow state and local plumbing codes.

Maximum flow: 5GPM

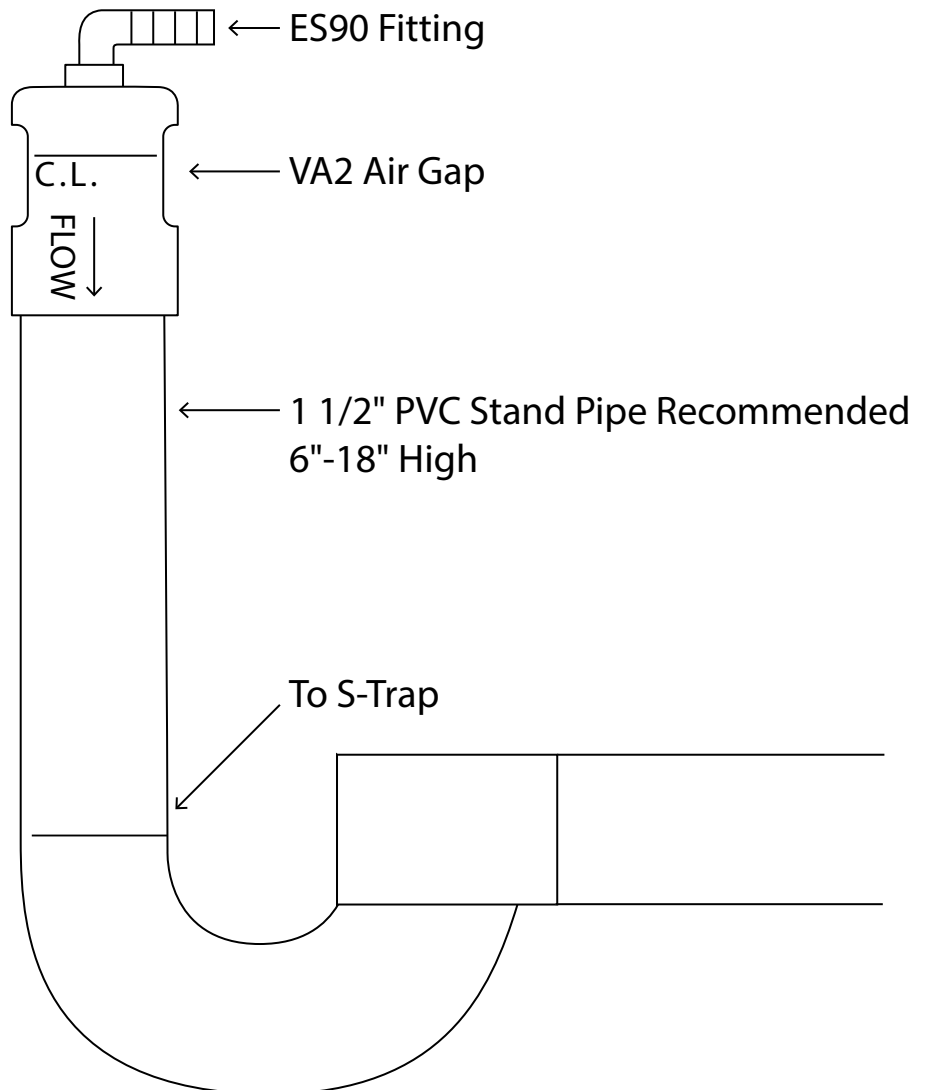

Warning: DO NOT get glue on bottom of fitting as this will cause splash (see image).

