



**A BETTER
AIR GAP**
J. H. VERNECO, INCORPORATED


VA-2T AIR GAP

INSTRUCTIONS FOR VA-2T AIR GAP INSTALLATION

Follow all state and local plumbing codes

Air Gap VA-2 gets glued onto a 1 1/2" PVC stand pipe. Follow all state and local plumbing codes. Stand pipes should be between 6 and 18 inches in height after a trap. For air gap to work, it must be exposed to open space (air).
Note: All stand pipes need trapped to prevent sewer gas from escaping back through the air gap.

It is recommended to use a hose clamp when attaching drain line from softener to fittings.

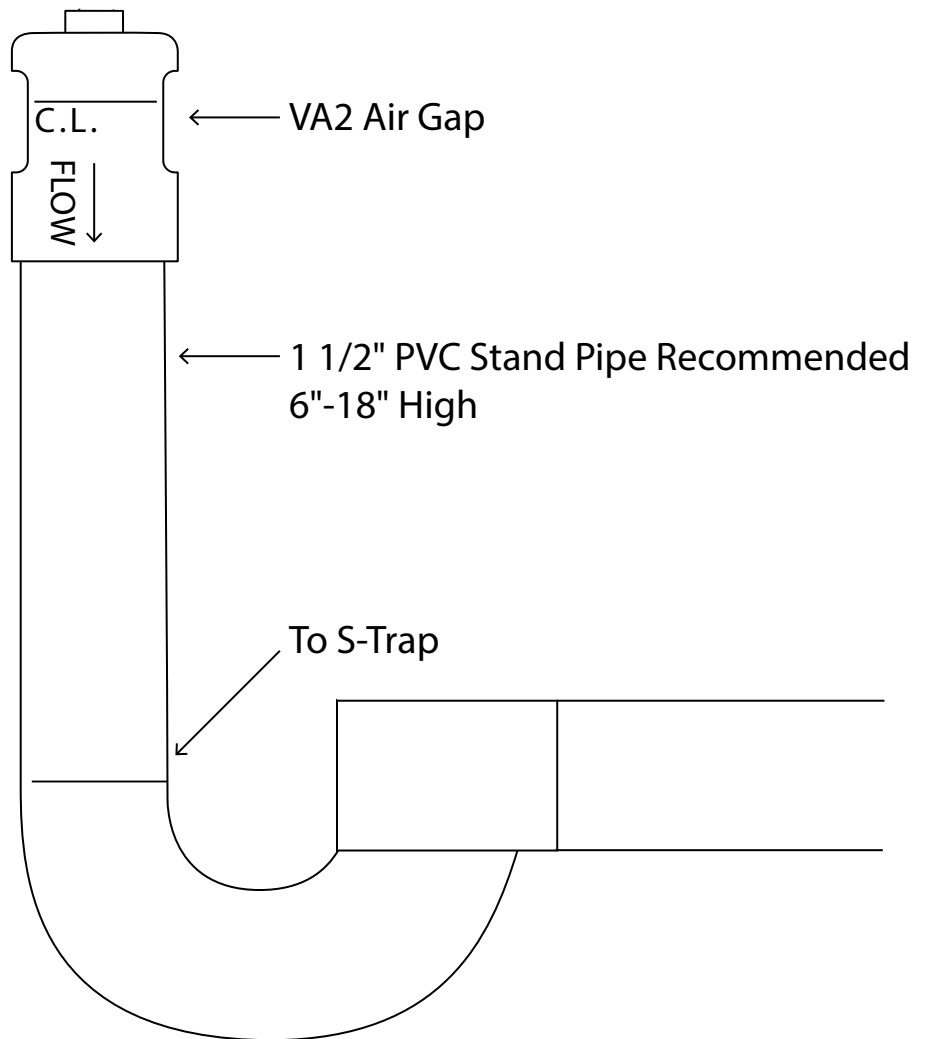

Maximum flow: 5GPM